

# Panasonic



## Operating Instructions

Digital Cordless Phone

Model No. **KX-TCD440AL**

Digital Cordless Answering System

Model No. **KX-TCD445AL**

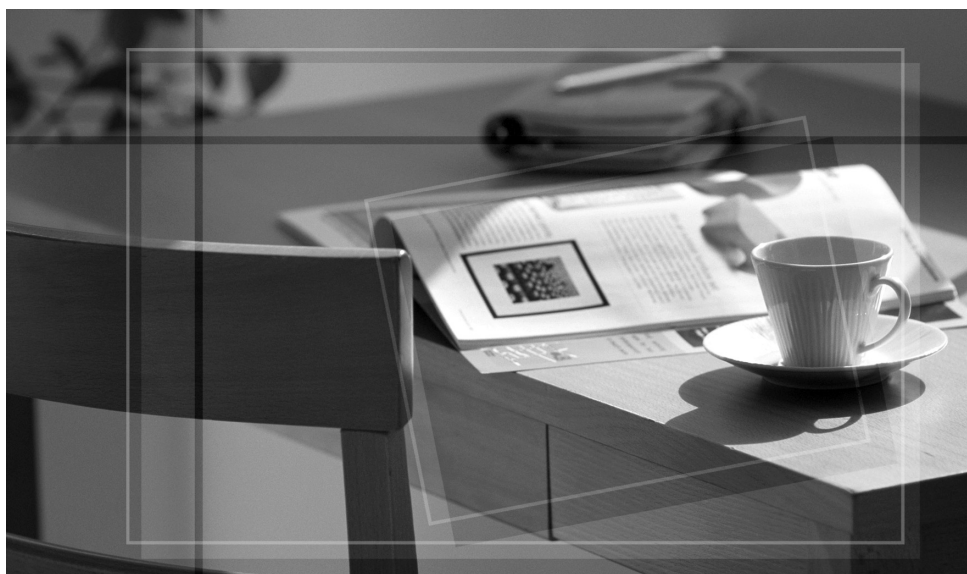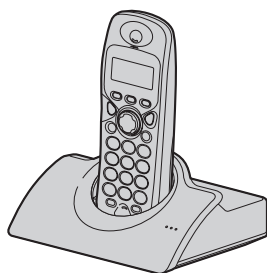

**This unit is Caller ID compatible. To display the caller's phone number, you must subscribe to Caller ID service.**

**Charge the batteries for about 7 hours before initial use.**

Please read these Operating Instructions before using the unit and save them for future reference.

## Table of Contents

### Preparation

Accessory information . . . . .	3
Important information . . . . .	4
Location of controls . . . . .	7
Connections . . . . .	8
Battery installation . . . . .	8
Battery charge . . . . .	9
Battery replacement . . . . .	10
Turning the power on/off . . . . .	10
Setting the time and date . . . . .	11
Wall mounting . . . . .	11

### Telephone

Making calls . . . . .	12
Answering calls . . . . .	14
Phonebook . . . . .	15
Hot key (quick dial) . . . . .	16
Caller ID service . . . . .	17

### Useful Telephone Settings

Guide to handset settings . . . . .	19
Handset settings . . . . .	20
Guide to base unit settings . . . . .	24
Base unit settings . . . . .	24

### Answering System Features (KX-TCD445 only)

Answering system . . . . .	27
Turning the answering system on/off . . . . .	27
Greeting message . . . . .	27
Listening to messages . . . . .	28
Recording a voice memo . . . . .	28
Memory capacity . . . . .	29
Remote operation . . . . .	29
Guide to answering system settings . . . . .	30

### Multi-unit Operation

Operating additional units . . . . .	32
Registering a handset to a base unit . . . . .	32
Setting all or selected handsets to ring . . . . .	34
Intercom between handsets . . . . .	35
Transferring calls between handsets/ Conference call . . . . .	35

### Useful Information

Troubleshooting . . . . .	36
Technical information . . . . .	38

### Index

Index . . . . .	39
-----------------	----

## Preparation








### Accessory information

**Thank you for purchasing a new Panasonic digital cordless phone.**

Dear Purchaser,

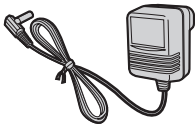You have acquired a product made in compliance with the digital enhanced cordless telecommunications (DECT) standard. DECT technology is characterized by high-security protection against interceptions as well as high-quality digital transmission. This telephone was designed for a wide range of applications.
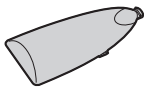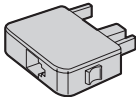
#### Included accessories

AC adaptor PQLV19AL 	Telephone line cord 	Rechargeable batteries (AAA size) HHR-4EPT/BA2 (HHR-4EPT) 
Battery cover 	Telephone plug 	Operating instructions 
Quick guide 		

#### Additional/replacement accessories

Model No.	Description
HHR-4EPT	2 rechargeable nickel metal hydride (Ni-MH) batteries
P-4NPT	2 rechargeable nickel cadmium (Ni-Cd) batteries
KX-A144AZ	Additional handset

## Preparation

### Important information

#### General

- Use only the power supply included with this product, noted on page 3.
- Do not connect the AC adaptor to any AC outlet other than a standard 220–240 V AC outlet.
- This product is unable to make calls when:
  - The portable handset batteries need recharging or have failed.
  - There is a power failure.
  - The key lock feature is turned on.
  - The call bar feature is turned on (only numbers stored as emergency numbers can be called).
- Do not open the base unit or handset (other than to change the batteries).
- This product should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.
- Care should be taken that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this product to excessive smoke, dust, mechanical vibration or shock.

#### Environment

- Do not use this product near liquid—for example, near a bath tub, washbowl, sink, etc. Damp basements should also be avoided.
- This product should be kept away from heat sources such as heaters, kitchen stoves, etc. It should also not be placed in rooms where the temperature is less than 5 °C or greater than 40 °C.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is located/installed near the unit and is easily accessible.

#### Warning:

- To prevent the risk of fire or electrical shock, do not expose this product to rain or any other type of moisture.
- The cordless handsets are magnetised and may retain small metallic objects.

#### Location

For maximum distance and noise-free operation, place your base unit:

- Away from electrical appliances such as TVs, radios, personal computers or other phones.
- In a convenient, high and central location.

#### Battery caution

- We recommend using the batteries, noted on page 3. Use only rechargeable batteries.
- Do not mix old and new batteries.
- Do not dispose of batteries in a fire, as they may explode. Check local waste management codes for special disposal instructions.
- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Charge the batteries in accordance with the information provided in these operating instructions.

## Preparation

### Instructions to customer

#### Installation

Attached to this telephone is an approval label. This label is evidence that it is a "Permitted Attachment" which has been authorised to be connected to your telephone service. Conditions relating to connection and operation of this Permitted Attachment are contained in Telecommunications General By-Law 220 (5).

You are authorised to install this Permitted Attachment yourself by plugging it into the line socket of any regular telephone. You may connect it in place of your existing telephone or to any spare telephone socket installed in your premises.

To disconnect your existing telephone you must first remove its plug from the line socket. You can then insert the plug of your Permitted Attachment into the socket and use your equipment.

If the plug of your existing telephone cannot be readily removed, you will have to remove the screw securing it. To do this proceed as follows:

- 1 Loosen screw "A" sufficiently to remove the socket cover. (See Fig. 1.)
- 2 Remove screw "B" and withdraw the plug. (See Fig. 2.)
- 3 Replace screw "B". (See Fig. 3.) Ensure that it screws completely into the socket recess. (If the screw is too long, increase the hole depth or replace the screw with one 5 mm shorter.)
- 4 Replace socket cover and tighten screw "A". (See Fig. 4.)

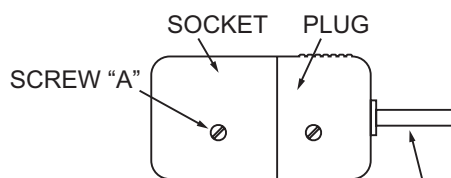


Fig. 1

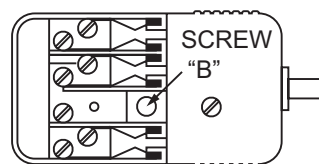


Fig. 2



Fig. 3

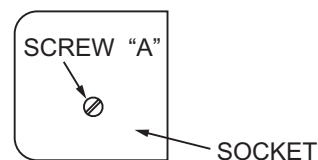


Fig. 4

## **Preparation**

---

If you are satisfied with the operation of your telephone service after plugging in your Permitted Attachment, your installation is completed.

You will be unable to connect this Permitted Attachment if your telephone service consists only of a wall phone or an old style telephone which is not connected by means of a modern plug and socket. In such cases a new socket will need to be installed.

Should the Permitted Attachment not operate when plugged into a socket, it is either faulty or unsuitable for operation with your telephone service. It should be returned to the store where purchased or to an Authorised Service Centre.

### **Service difficulties**

If at any time a fault occurs on your telephone service carry out the following checks before you call for service:

- Disconnect the Permitted Attachment and try using the service with the normal telephone.
- If the telephone service then operates satisfactorily, the fault is in your Permitted Attachment. Leave the Permitted Attachment disconnected and report the fault to its supplier or agent to arrange for repair.
- If when using the telephone the service is still faulty, report the fault to "Service Difficulties and Faults" for attention.

You are required to keep this Permitted Attachment in good working order while it is connected to your telephone service. Its construction or internal circuit must not be modified in any way without permission.


### **Warning:**

This cordless telephone system does not incorporate provision for secrecy of conversations. Appropriately tuned radio equipment and other cordless telephone systems in close proximity may be used by a third party to monitor and possibly interrupt conversations in progress when this system is on radio operation.

## Preparation

### Location of controls

#### Handset

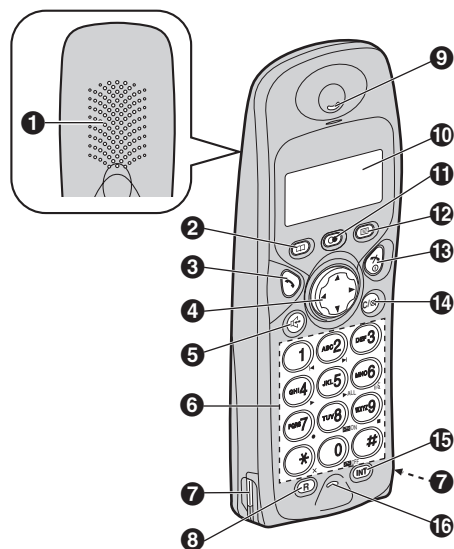

- 1 Speaker**
- 2 [☰] (Phonebook)**
- 3 [☎] (Talk)**
- 4 Navigator**
  - [▲][▼]: To search for the desired item in the setting menu, caller information or phonebook.
  - [▶]: To select the desired item or move the cursor to the right.
  - [◀]: To go back to the previous display or move the cursor to the left.
- 5 [☎] (Speakerphone)**
- 6 Dial keypad**
  - The icons printed below the dial keys shown in the illustration above (▶, ☎, ■ etc.) are found on the KX-TCD445 only. These icons indicate answering system operations.
- 7 Charge contacts**
- 8 [R] (Recall)**


- 9 Receiver**
- 10 Display**
- 11 [⏮] (Redial/Pause)**
- 12 [☰] (Menu/OK)**
- 13 [⏻] (Off/Power)**
- 14 [C/☒] (Clear/Mute)**
- 15 [INT] (Intercom)**
- 16 Microphone**

#### Display descriptions

Icons	Meaning
	Within range of base unit
	Out of range, no registration or no power on base unit
	Paging, intercom mode or accessing base unit
	Making or answering a call
	Phonebook mode
	Setting mode
	Battery strength is low
	Battery strength is high
	Answering system is on (KX-TCD445 only) (page 27)
	Call bar is on (page 22)
	Direct call is on (page 22)
	Key lock is on (page 13)
	Ringer volume is off (page 20)
	Displayed when you press [⏮]


## Preparation

### Base unit

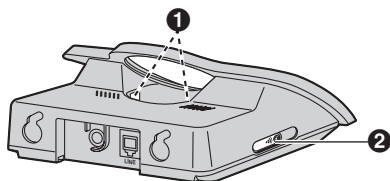

- ❶ Charge contacts
- ❷ [•••] (Page)

### Connections

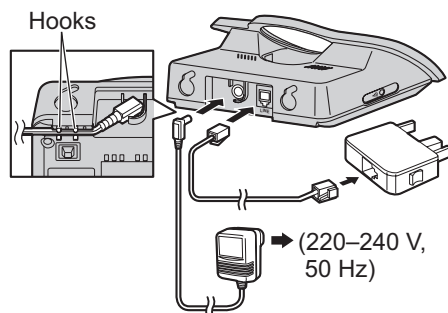


#### Note:

- If the handset is not charged, you cannot make or answer calls.
- Never install telephone wiring during a lightning storm.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- Use only the AC adaptor, noted on page 3.
- This unit is not designed to be used with rotary (pulse dialling) services.

### Battery installation

- ❶ Insert the batteries negative (–) terminal first.

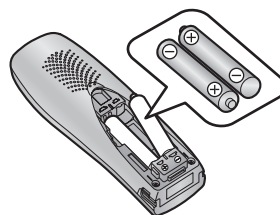

- ❷ Close the battery cover.



#### Note:


- Use only rechargeable batteries (page 3).



## Preparation

### Battery charge

Place the handset on the base unit for about 7 hours before initial use.

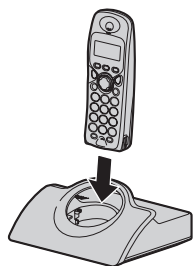



**Note:**





- Clean the charge contacts of the handset and base unit with a soft, dry cloth once a month, otherwise the batteries may not charge properly. Clean more often if the unit is exposed to grease, dust or high humidity.

### Battery strength

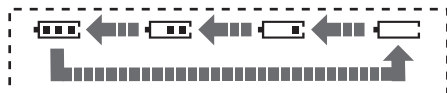When charging, the battery icon is shown as follows.



  - When the batteries are fully charged,  flashes.

Battery icons	Battery strength
	High
	Medium
	Low
	Needs to be charged

**Note:**

- If the handset is turned off, it will be turned on automatically when it is placed on the base unit.

### Battery life

After your Panasonic batteries are fully charged, you can expect the following performance:

#### Ni-MH batteries (typical 700 mAh)

Operation	Operating time
While in use (talking)	10 hours max.
While not in use (standby)	200 hours max.

#### Ni-Cd batteries (typical 250 mAh)


Operation	Operating time
While in use (talking)	4 hours max.
While not in use (standby)	60 hours max.

**Note:**

- The included batteries are Ni-MH batteries.
- Battery operating time may be shortened depending on usage conditions and ambient temperature.

## Preparation


### Battery replacement

If  flashes even when the handset batteries have been fully charged, both batteries must be replaced.

#### Important:

- Please use only the Panasonic batteries, noted on page 3.
- Use only rechargeable batteries. If you install non-rechargeable batteries and start charging, the batteries may leak electrolyte.
- Do not mix old and new batteries.
- Use only 2 nickel metal hydride (Ni-MH) batteries or 2 nickel cadmium (Ni-Cd) batteries. Do not mix battery types.
- Ensure that the correct battery type is selected (page 23).


- 1 Press the notch on the cover firmly and slide it in the direction of the arrow.

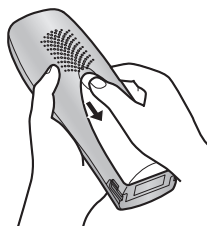

- 2 Remove the batteries positive (+) terminal first. Replace both batteries. See the battery installation on page 8.


### Turning the power on/off

#### Power on

Press [>] for about 1 second.

- The display will change to the standby mode.

#### Power off

Press [>] for about 2 seconds.

- The display will go blank.

## Preparation

### Setting the time and date

#### Important:


- Confirm that the AC adaptor is connected.
- Ensure that  $\nabla$  is not flashing.

- 1 Press **[ ]**.
- 2 Press **[▼]** repeatedly to display "SETTING BS", then press **[▶]**.
- 3 Press **[✕]**.
- 4 Enter the current hour and minute by selecting 2 digits for each (24-hour time entry).  
**Example:** 15:15  
 Press **[1][5] [1][5]**.
  - If you make a mistake, press **[C/⌫]**.  
 Digits will be cleared from the right.
- 5 Press **[▶]**.
  - "SETTING BS" will be displayed.
- 6 Press **[▶]**, then press **[✕]** 2 times.
- 7 Enter the current day, month and year by selecting 2 digits for each.  
**Example:** 17 May, 2004  
 Press **[1][7] [0][5] [0][4]**.
  - If you make a mistake, press **[C/⌫]**.  
 Digits will be cleared from the right.
- 8 Press **[▶]**.
  - "SETTING BS" will be displayed.
- 9 Press **[✕⊙]**.

#### Note:


- If a power failure occurs, set the time and date again.

### Wall mounting

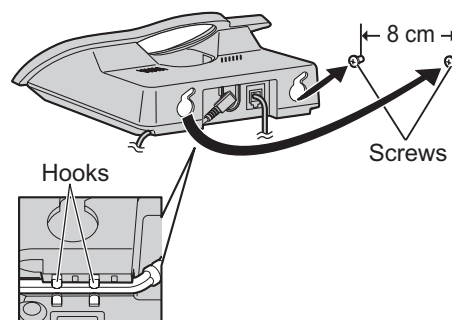

#### Note:

- Make sure the screws are securely fastened to the wall.
- Use the following wall template to position the screws before drilling.

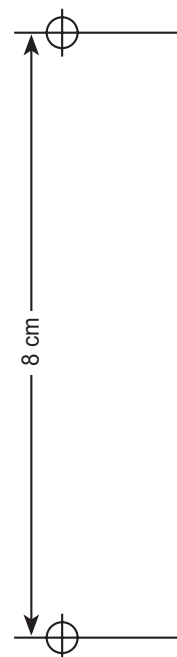

## Telephone

### Making calls

- 1 Lift the handset and dial the phone number.
  - To correct a digit, press **[C/⌫]**, then enter the correct number.
- 2 Press **[↶]**.
- 3 When finished talking, press **[⏏]** or place the handset on the base unit.

### Speakerphone

The handset features a digital speakerphone, which allows you to have hands-free conversations. Press **[📞]** to turn on the speakerphone during a conversation. Press **[↶]** to switch back to the receiver.

- For best performance, please note the following:
  - Use the speakerphone in a quiet environment.
  - Speak alternately with the caller.
  - If you or the other party have difficulty hearing each other, press **[▲]** or **[▼]** repeatedly to adjust the speaker volume as necessary.

#### To adjust the receiver or speaker volume

Press **[▲]** or **[▼]** while talking.  
3 levels are available for the receiver.  
6 levels are available for the speaker.

### Redial feature

#### To redial the last number dialled

Press **[📞]**, then press **[↶]** or **[📞]**.

#### To redial automatically

Redial by pressing **[📞]** then **[📞]** if you want the unit to redial the phone number again automatically if the other party's line is engaged. The unit will redial up to 10 times. While the unit is waiting to redial, **[📞]** will

flash and mute is automatically turned on.

#### Note:

- Automatic redial is cancelled when the navigator or any button is pressed.
- If mute does not turn off after the line is connected, press **[C/⌫]**.

#### To make a call using the redial list

The last 10 phone numbers dialled are stored in the redial list.

- 1 Press **[📞]**.
  - The last number dialled will be displayed.
- 2 Press **[▼]** repeatedly to select the number.
  - To exit the list, press **[⏏]**.
- 3 Press **[↶]** or **[📞]**.

#### To edit a number in the redial list before calling it

- 1 Press **[📞]**.
- 2 Press **[▼]** repeatedly to select the number, then press **[▶]**.
- 3 Press **[▼]** repeatedly to display "EDIT CALL NO", then press **[▶]**.
  - The first digit of the number will flash.
- 4 Press **[◀]** or **[▶]** to move the cursor to the right of where you want to edit the number.
- 5 Edit the number.
  - To erase a digit, press **[C/⌫]**.
- 6 Press **[↶]** or **[📞]**.

#### To erase numbers in the redial list

- 1 Press **[📞]**.
- 2 Press **[▼]** repeatedly to select the number, then press **[▶]**.
- 3 Press **[▼]** repeatedly to display "CLEAR", then press **[▶]**.
  - If you want to erase all numbers in the list, select "ALL CLEAR".

## Telephone

- 4 Press [▼] repeatedly to display "YES", then press [▶].
  - To erase other numbers, repeat from step 2.
- 5 Press [✕].


### To store a number from the redial list into the phonebook

- 1 Press [●].
- 2 Press [▼] repeatedly to select the number, then press [▶].
- 3 Press [▼] repeatedly to display "SAVE TEL NO", then press [▶].
- 4 Press [≡].
- 5 Enter the name (9 characters max.; see the character table on page 15).
- 6 Press [≡].

### Other features

#### Mute

You can mute your voice during a conversation. While mute is turned on, you will be able to hear the other party, but the other party will not be able to hear you. To mute your voice, press [C/]. To return to the conversation, press [C/] again.


- While mute is turned on,  flashes.

#### Key lock

The dial keys can be locked so that no calls can be made. Only incoming calls will be accepted while key lock is on.

To turn on key lock, press [≡] for about 2 seconds.

- A beep will sound and the following will be displayed.

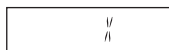

To turn off key lock, press [≡] for about 2 seconds.

#### Note:

- Emergency calls cannot be made until key lock is turned off.
- Key lock is turned off when the handset is turned off.

#### R button (to use the recall feature)

[R] is used to access optional telephone services. Contact your service provider for details.

If your unit is connected to a PBX (private branch exchange), pressing [R] can allow you to access certain features of your host PBX such as transferring an extension call.

- Users in Australia can access Telstra's "EASY CALL" service by having the recall time set at 100 ms (default setting, see page 24), and then follow Telstra's "EASY CALL" instructions to operate this service.

#### Pause button (for PBX line/long distance service users)

A pause is sometimes required when making calls using a PBX or long distance service.

**Example:** If you have to dial [0] before dialling outside numbers manually, you will probably pause after dialling [0] until you hear a dial tone.

- 1 Press [0].
- 2 Press [●].
  - "P" will be displayed.
- 3 Dial the phone number.
- 4 Press [↶] or [↷].

#### Note:

- Pressing [●] once creates one pause. Press [●] repeatedly to create longer pauses. To change pause length, see page 25.

#### Recording a telephone conversation (KX-TCD445 only)

You can record your conversation while on

## Telephone

an outside call.

### Important:

- Before recording a conversation, you should inform the other party that the conversation will be recorded.

- 1 Press **[RECORD]** during a conversation.
- 2 Press **[STOP]**.
  - "RECORDING" is displayed and recording starts.
  - A beep sounds every 15 seconds and can be heard by the other party, but is not recorded.
- 3 To stop recording, press **[RECORD]**, then press **[STOP]**.

### Note:

- Recorded conversations are treated as new messages.
- To listen to the recorded conversation, see page 28.
- If message memory becomes full, **[MESSAGE]** flashes rapidly, and recording stops. Erase unnecessary messages (page 28).

## Answering calls

- 1 Lift the handset and press **[ANSWER]** or **[HOLD]** when the unit rings.
  - You can also answer a call by pressing any dial key from **[0]** to **[9]**, **[\*]**, **[#]**, or **[INT]**. (**Any key talk feature**)
- 2 When finished talking, press **[END]** or place the handset on the base unit.

### Auto talk feature

You can answer calls simply by lifting the handset off the base unit. You do not need to press **[ANSWER]**. To turn this feature on, see page 23.

### To turn the handset ringer off temporarily

When an outside call comes in, press and hold **[MUTE]** for about 1 second.

### Note:

- This feature will not work for intercom calls or when the handset is on the base unit.

## Handset locator

Using this feature, you can locate the handset if it has been misplaced.

- 1 Press **[LOCATOR]** on the left side of the base unit.
  - The base unit will page the handset for about 1 minute.
- 2 To stop paging, press **[LOCATOR]** on the base unit or press **[ANSWER]** on the handset.

## Telephone

### Phonebook

#### Storing phone numbers and names

Up to 20 phone numbers can be stored in the phonebook for quick access.

- 1 Press **[F5]** 2 times.
- 2 Enter a phone number (24 digits max.).
  - Each number stored in the phonebook will be given an index number (01–20). This number will be shown to the left of the stored phone number.
- 3 Press **[F5]**.
- 4 Enter the party's name (9 characters max.; see the character table).
- 5 Press **[F5]**.
  - To store other entries, repeat from step 2.
- 6 Press **[F6]**.

#### Character table

Keys	Characters
<b>[1]</b>	# [ ] * , - / 1
<b>[2]</b>	A B C 2
<b>[3]</b>	D E F 3
<b>[4]</b>	G H I 4
<b>[5]</b>	J K L 5
<b>[6]</b>	M N O 6
<b>[7]</b>	P Q R S 7
<b>[8]</b>	T U V 8
<b>[9]</b>	W X Y Z 9
<b>[0]</b>	(Space) 0

#### Note:

- To enter another character located on the same dial key, press **[▶]** to move the cursor to the next space.

- If there is no space to store new entries, "MEMORY FULL" will be displayed. Erase unnecessary entries.

#### To edit/correct a mistake

- 1 Press **[◀]** or **[▶]** to move the cursor to the right of where you want to correct the number/character.
- 2 Press **[C/✕]** to erase a digit, then enter the correct number/character.

#### Editing a stored entry

- 1 Press **[□□]**.
- 2 Press **[▲]** or **[▼]** repeatedly to display the desired entry, then press **[▶]**.
- 3 Press **[▼]** repeatedly to display "EDIT", then press **[▶]**.
  - If you do not need to edit the phone number, skip to step 5.
- 4 Edit the phone number.
- 5 Press **[F5]**.
  - If you do not need to edit the name, skip to step 7.
- 6 Edit the name. See the character table.
- 7 Press **[F5]**.

#### Erasing a stored entry

- 1 Press **[□□]**.
- 2 Press **[▲]** or **[▼]** repeatedly to display the desired entry, then press **[▶]**.
- 3 Press **[▼]** repeatedly to display "CLEAR", then press **[▶]**.
- 4 Press **[▼]** repeatedly to display "YES", then press **[▶]**.
  - To cancel erasing, select "NO".
  - To erase other entries, repeat from step 2.
- 5 Press **[F6]**.

## Telephone

### Making calls using the phonebook

Before using this feature, store the desired phone numbers and names into the phonebook (page 15).

- 1 Press [☐].
- 2 Press [▲] or [▼] repeatedly to display the desired entry.
- 3 Press [↶] or [↷].

### Hot key (quick dial)

#### Assigning an entry in the phonebook to a hot key

Dial keys [1] to [9] can each be used as a "hot key", allowing you to dial a number from the phonebook by simply pressing a dial key.

- 1 Press [☐].
- 2 Press [▲] or [▼] repeatedly to display the desired entry, then press [▶].
- 3 Press [▼] repeatedly to display "HOT KEY REG", then press [▶].
- 4 Press [▼] repeatedly to select the desired dial key ([1] to [9]), then press [▶].
  - If the dial key is already assigned as a hot key, the displayed number will flash.
- 5 Press [▼] repeatedly to display "YES", then press [▶].
  - To register other entries, repeat from step 2.
- 6 Press [↶].

#### Erasing a hot key

- 1 Press and hold the desired hot key ([1] to [9]), then press [▶].
  - "CLEAR" will be displayed.

- 2 Press [▶].

- 3 Press [▼] repeatedly to display "YES", then press [▶].

- 4 Press [↶].

#### Note:

- The number erased from a hot key will not be erased from the phonebook. To erase from the phonebook, see page 15.

### Making calls using a hot key

- 1 Press and hold the desired hot key ([1] to [9]).
  - You can view other hot key registrations by pressing [▲] or [▼].
- 2 Press [↶] or [↷].



## Telephone

### Caller ID service

#### Important:


- This unit is Caller ID compatible. To display the caller's phone number, you must subscribe to Caller ID service. After subscribing to Caller ID service, this unit will display caller information.

#### How Caller ID is displayed

The unit will display the calling party's phone number after the first ring. You can view the caller information of the last 50 different callers.

When new calls have been received, the display will show the number of new calls.

**Example:** 4 new calls have been received.

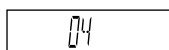

- The number of new calls will be cleared after viewing all caller information.

#### Note:

- When you receive a call from the same phone number you stored with a name in the phonebook, the display will show the stored name.
- If the unit is connected to a PBX system, you may not receive the caller information.
- When the caller dialed from an area which does not provide Caller ID service, "OUT OF AREA" will be displayed.
- When the caller requested not to send caller information, either no information or "PRIVATE" will be displayed.
- The display will not show caller information while using the handset for an intercom call. However, the caller information will be stored.

### Call waiting and Caller ID compatible

If you subscribe to Caller ID service, your handset displays the second caller's

information while talking. After you hear a call-waiting tone, the caller's phone number will be displayed.

You can answer the second call, keeping the first call on hold. Follow Telstra or your service provider instructions using **[R]**.

- If the phone number is stored in the phonebook with its name, the caller's name will also be displayed.
- Please contact Telstra or your service provider for details and availability in your area.

#### Using Caller ID type II

When you receive a second call during a conversation, you will hear a signal tone following the call waiting tone and the **conversation will be interrupted or muted for a short period of time**. This is not the fault of the product as these events are normal.

#### Note:

- The tones are generated by the service provider.


### Viewing caller information and calling back

The unit will automatically store the phone numbers of the last 50 different callers from the most recent call to the oldest. When the 51st call is received, the oldest caller information will be automatically erased. You can easily view caller information and use it to make calls.

- 1 Press **[▼]**.
- 2 Press **[▼]** repeatedly to search from the most recent caller information.

## Telephone

### Example:

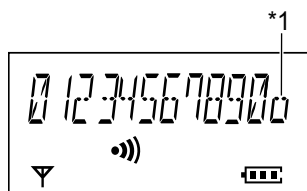

\*1 Shown when this call has already been viewed or answered.

- 3 Press [↶] or [↷] to call back the displayed party.

### Note:

- When no calls have been received, the display will show "NO ITEM".

### Editing a caller's phone number before calling back

- 1 Press [▲] or [▼] repeatedly to display the desired entry, then press [▶].
- 2 Press [▼] repeatedly to display "EDIT CALL NO", then press [▶].
- 3 Press [◀] or [▶] to move the cursor to the right of where you want to edit the number.
- 4 Edit the phone number.
  - To erase a digit, press [C/ⓧ].
- 5 Press [↶] or [↷].

### Note:

- The edited phone number will not be saved.

### Erasing caller information

- 1 Press [▲] or [▼] repeatedly to display the desired entry, then press [▶].
- 2 Press [▼] repeatedly to display "CLEAR", then press [▶].
  - If you want to erase all caller information, select "ALL CLEAR".
- 3 Press [▼] repeatedly to display "YES", then press [▶].

- 4 Press [✕⓪].

### Storing caller information into the phonebook

- 1 Press [▲] or [▼] repeatedly to display the desired entry, then press [▶].
- 2 Press [▼] repeatedly to display "SAVE TEL NO", then press [▶].
- 3 Press [Ⓜ].
- 4 Enter the party's name (9 characters max.; see the character table on page 15).
- 5 Press [Ⓜ].
- 6 Press [✕⓪].

## Useful Telephone Settings

### Guide to handset settings

For your reference, a chart of all items which can be customised for the handset is printed below. Details of each item can be found on the corresponding pages.

To enter the 2nd menu, first press [►]. Press [▼] repeatedly to display "SETTING HS", then press [►].

2nd menu	3rd menu	Default setting	Page
"TIME ALARM"	"SET TIME"	_____	page 20
	"SET ALARM"	"OFF"	page 20
"RINGER OPT"	"RINGER VOL"	Level 6	page 20
	"EXT RINGER"	"RING TYPE 1"	page 20
	"INT RINGER"	"RING TYPE 1"	page 20
	"PAGING"	"RING TYPE 1"	page 20
	"ALARM"	"RING TYPE 1"	page 20
"TONE OPT"	"KEY TONE"	"ON"	page 21
	"CALL WAITING"	"ON"	page 21
	"RANGE ALARM"	"OFF"	page 21
	"BATTERY LOW"	"ON"	page 21
"DISPLAY OPT"	"STANDBY MODE"	"CLOCK"	page 21
	"TALK MODE"	"TALK TIME"	page 21
	"LANGUAGE"	"ENGLISH"	page 22
"CALL OPT"	"CALL BAR"	"OFF"	page 22
	"DIRECT NO"	_____	page 22
	"SET DIRECT"	"OFF"	page 22
"OTHER OPT"	"HSPIN CHANGE"	"0000"	page 23
	"AUTO TALK"	"OFF"	page 23
	"BATTERY TYPE"	"NI-MH"	page 23
"REGISTRATION"	"REGISTER HS"	_____	page 32
	"CANCEL BS"*1	_____	page 33
"SELECT BS"	_____	"AUTO"	page 33
"RESET HS"	_____	_____	page 23

\*1 If you cancel a base unit, the handset will "forget" the base unit registration.

## Useful Telephone Settings

### Handset settings

#### Time alarm

An alarm will sound for 3 minutes at the set time once or daily.



“ONCE”: The alarm will ring only once.

“REPEAT DAILY”: The alarm will ring at the set time everyday.

“OFF”: Turns this feature off.

Set the time and date beforehand (page 11).


#### Setting the time of alarm

- 1 Press [  ].
- 2 Press [ ▼ ] repeatedly to display “SETTING HS”, then press [ ▶ ].
- 3 Press [ ▼ ] repeatedly to display “TIME ALARM”, then press [ ▶ ].
- 4 Press [ ▼ ] repeatedly to display “SET TIME”, then press [ ▶ ].
- 5 Enter the desired hour and minute by selecting 2 digits for each (24-hour time entry).
  - To erase a digit, press [ C/⌫ ].
- 6 Press [ ▶ ].
- 7 Press [ ▼ ] repeatedly to select the desired setting, then press [ ▶ ].
- 8 Press [  ].


#### Note:

- To stop the alarm, press any dial key.
- When in talk or intercom mode, the alarm will not sound until the call has ended.
- If you select “ONCE”, the setting will be changed to “OFF” after the alarm rings.

#### Changing the alarm frequency

- 1 Press [  ].
- 2 Press [ ▼ ] repeatedly to display “SETTING HS”, then press [ ▶ ].
- 3 Press [ ▼ ] repeatedly to display “TIME



ALARM”, then press [ ▶ ].

- 4 Press [ ▼ ] repeatedly to display “SET ALARM”, then press [ ▶ ].
- 5 Press [ ▼ ] repeatedly to select the desired setting, then press [ ▶ ].
- 6 Press [  ].

### Ringer options

#### Ringer volume

7 levels (high to off) are available.

- 1 Press [  ].
- 2 Press [ ▼ ] repeatedly to display “SETTING HS”, then press [ ▶ ].
- 3 Press [ ▼ ] repeatedly to display “RINGER OPT”, then press [ ▶ ].
- 4 Press [ ▼ ] repeatedly to display “RINGER VOL”, then press [ ▶ ].
- 5 Press [ ▲ ] or [ ▼ ] repeatedly to select the desired volume, then press [ ▶ ].
- 6 Press [  ].

#### Note:

- When the ringer volume is set to off, the following will be displayed.



#### Ringer types for external calls, internal calls, paging or alarm


There are 20 ringer types (6 ringers and 14 melody ringers) available for each item.

“EXT RINGER”: For external calls

“INT RINGER”: For internal calls

“PAGING”: For paging

“ALARM”: For alarm

- 1 Press [  ].
- 2 Press [ ▼ ] repeatedly to display “SETTING HS”, then press [ ▶ ].
- 3 Press [ ▼ ] repeatedly to display “RINGER OPT”, then press [ ▶ ].
- 4 Press [ ▼ ] repeatedly to display the

## Useful Telephone Settings

desired item, then press [▶].

- 5 Press [▼] repeatedly to select the desired setting from "RING TYPE 1" to "RING TYPE 20", then press [▶].

- 6 Press [✕⓪].

### Note:

- If you select one of the melody ringer types, the ringer will continue to sound for several seconds if the caller hangs up before you answer. You may hear a dial tone or no one on the line when you answer a call.

## Tone options

You can turn the following tones and alarms on or off.

"KEY TONE": Tones heard when keys are pressed. Includes confirmation tones and error tones.

"CALL WAITING": Tones heard when an outside call is received while on an intercom call.

"RANGE ALARM": An alarm heard when you move out of range of a base unit during a conversation.

"BATTERY LOW": An alarm heard when the batteries need to be charged.

- 1 Press [⓪].
- 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].
- 3 Press [▼] repeatedly to display "TONE OPT", then press [▶].
- 4 Press [▼] repeatedly to display the desired item, then press [▶].
- 5 Press [▼] repeatedly to select "ON" or "OFF", then press [▶].
- 6 Press [✕⓪].

## Display options

### Selecting the standby mode display

"CLOCK": The time and date will be

displayed. Set the time and date beforehand (page 11).

"OFF": Turns this feature off.

"BS NO": The base unit number will be displayed.

"HS NO": The handset number will be displayed.

- 1 Press [⓪].
- 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].
- 3 Press [▼] repeatedly to display "DISPLAY OPT", then press [▶].
- 4 Press [▼] repeatedly to display "STANDBY MODE", then press [▶].
- 5 Press [▼] repeatedly to select the desired setting, then press [▶].
- 6 Press [✕⓪].

### Note:

- If you subscribe to a Caller ID service, the display will show the number of new calls even if "CLOCK" has been selected (page 17).
- If "BS NO" is selected, the base unit number will be displayed.

### Example:

..?..

- If "HS NO" is selected, the handset number will be displayed.

### Example:

[2]

### Selecting the talk mode display

"TALK TIME": The length of the current call will be displayed.

"PHONE NO": The phone number will be displayed.

- 1 Press [⓪].
- 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].
- 3 Press [▼] repeatedly to display "DISPLAY OPT", then press [▶].

## Useful Telephone Settings

- 4 Press [▼] repeatedly to display "TALK MODE", then press [▶].
- 5 Press [▼] repeatedly to select the desired setting, then press [▶].
- 6 Press [✕⓪].

### Selecting the display language

10 display languages are available.

- 1 Press [≡].
- 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].
- 3 Press [▼] repeatedly to display "DISPLAY OPT", then press [▶].
- 4 Press [▼] repeatedly to display "LANGUAGE", then press [▶].
- 5 Press [▼] repeatedly to select the desired language, then press [▶].
- 6 Press [✕⓪].

#### Note:

- If you select a language you cannot read, reset the handset to its default settings (page 23).

## Call options

### Setting call bar

This feature prohibits making outside calls. When call bar is turned on, only intercom calls and emergency calls can be made. To store emergency numbers, see page 26.

- 1 Press [≡].
- 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].
- 3 Press [▼] repeatedly to display "CALL OPT", then press [▶].
- 4 Press [▼] repeatedly to display "CALL BAR", then press [▶].
- 5 Enter "0000" (default handset PIN).
  - If you changed PIN, enter it (page 23).
- 6 Press [▼] repeatedly to select "ON" or

"OFF", then press [▶].

- 7 Press [✕⓪].

#### Note:

- While this feature is turned on, the following will be displayed.



### Storing the direct call number

Direct call allows you to dial a preset phone number simply by pressing [↶] or [↷]. No dialling is necessary.

- 1 Press [≡].
- 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].
- 3 Press [▼] repeatedly to display "CALL OPT", then press [▶].
- 4 Press [▼] repeatedly to display "DIRECT NO", then press [▶].
- 5 Enter a phone number (24 digits max.).
  - To correct a mistake, press [C/ⓧ]. Digits are cleared from the right.
- 6 Press [≡] 2 times.
- 7 Press [▶] to select "ON", then press [✕⓪].

#### Note:

- When this feature is turned on, only the direct call number can be called.
- While this feature is turned on, the following will be displayed.



### Turning direct call on/off

- 1 Press [≡].
- 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].
- 3 Press [▼] repeatedly to display "CALL OPT", then press [▶].
- 4 Press [▼] repeatedly to display "SET DIRECT", then press [▶].

## Useful Telephone Settings

5 Press [▼] repeatedly to select "ON" or "OFF", then press [▶].

6 Press [✕⓪].

### Other options

#### Changing the handset PIN (Personal Identification Number)

The handset's default PIN is "0000".

##### Important:

- If you change the PIN, please write down your new PIN as the unit will not reveal the PIN to you. If you forget your PIN, consult your nearest Panasonic service centre.

1 Press [≡].

2 Press [▼] repeatedly to display "SETTING HS", then press [▶].

3 Press [▼] repeatedly to display "OTHER OPT", then press [▶].

4 Press [▼] repeatedly to display "HSPIN CHANGE", then press [▶].

5 Enter the current 4-digit handset PIN.

6 Enter the new 4-digit handset PIN.

7 Enter the new 4-digit handset PIN again.

8 Press [✕⓪].

#### Setting auto talk

This feature allows you to answer calls simply by lifting the handset off the base unit. You do not need to press [↶].

1 Press [≡].

2 Press [▼] repeatedly to display "SETTING HS", then press [▶].

3 Press [▼] repeatedly to display "OTHER OPT", then press [▶].

4 Press [▼] repeatedly to display "AUTO TALK", then press [▶].

5 Press [▼] repeatedly to select "ON" or "OFF", then press [▶].

6 Press [✕⓪].

#### Setting the battery type

"NI-MH": Select when nickel metal hydride batteries are installed.

"NI-CD": Select when nickel cadmium batteries are installed.

1 Press [≡].

2 Press [▼] repeatedly to display "SETTING HS", then press [▶].

3 Press [▼] repeatedly to display "OTHER OPT", then press [▶].

4 Press [▼] repeatedly to display "BATTERY TYPE", then press [▶].

5 Press [▼] repeatedly to select the desired setting, then press [▶].

6 Press [✕⓪].

#### Resetting the handset to its default settings

1 Press [≡], [▼], [▶], [▲] and [▶].

2 Enter "0000" (default handset PIN).

- If you changed PIN, enter it (page 23).

3 Press [▼], [▶] and [✕⓪].

##### Note:

- For the default settings, see page 19.
- Phonebook entries will not be erased.
- The battery type setting will not be reset.

## Useful Telephone Settings

### Guide to base unit settings

For your reference, a chart of all items which can be customised for the base unit is printed below. Details of each item can be found on the corresponding pages.

Code No.	Feature (Default setting)	Page
[0]	Reset base unit	page 26
[1]	Set all or selected handsets to ring (All handsets ring)	page 34
[2]	Base unit ringer volume (Medium)	page 24
[3]	Recall time (100 ms)	page 24
	Pause length (3 seconds)	page 25
[5]	Change base unit PIN ("0000")	page 24
[6]	Call restriction	page 25
	Emergency number ("000" and "106")	page 26
[7]	Cancel a handset* <sup>1</sup>	page 33
[*]	Time and date	page 11

\*1 If you cancel a handset, the base unit will "forget" the handset registration.

### Base unit settings

#### Changing base unit PIN (Personal Identification Number)

The base unit's default PIN is "0000".

##### Important:

- If you change the PIN, please write down your new PIN as the unit will not reveal the PIN to you. If you forget your PIN, consult your nearest Panasonic service centre.

- 1 Press [RECALL].
- 2 Press [▼] repeatedly to display "SETTING BS", then press [▶].
- 3 Press [5].
- 4 Enter the current 4-digit base unit PIN.
- 5 Enter the new 4-digit base unit PIN.
- 6 Enter the new 4-digit base unit PIN again.
- 7 Press [END].

#### Adjusting ringer volume

4 levels (high to off) are available.

- 1 Press [RECALL].
- 2 Press [▼] repeatedly to display "SETTING BS", then press [▶].
- 3 Press [2] 2 times.
- 4 Select the desired setting by pressing [1] for low, [2] for medium, [3] for high or [0] for off.
- 5 Press [▶], then press [END].

#### Setting recall time

Change the recall time if necessary to suit your PBX or service provider. For further information, consult your nearest Panasonic service centre.

- 1 Press [RECALL].
- 2 Press [▼] repeatedly to display



## Useful Telephone Settings

"SETTING BS", then press [▶].

- 3 Press [3].
- 4 Enter "0000" (default base unit PIN).
  - If you changed PIN, enter it (page 24).
- 5 Press [2].
- 6 Press [1].
- 7 Select the desired setting by pressing [1] for 700 ms or [2] for 100 ms.
- 8 Press [▶], then press [✕⓪].

### Setting pause length

- 1 Press [≡].
- 2 Press [▼] repeatedly to display "SETTING BS", then press [▶].
- 3 Press [3].
- 4 Enter "0000" (default base unit PIN).
  - If you changed PIN, enter it (page 24).
- 5 Press [3].
- 6 Select the desired setting by pressing [1] for 3 seconds or [2] for 5 seconds.
- 7 Press [▶], then press [✕⓪].

### Setting call restriction

You can restrict selected handsets from dialling certain phone numbers. You can assign up to 10 phone numbers (memory locations 1–10) to be restricted per handset. If a restricted number is dialled, the call will not be connected and the restricted number will flash on the display. For example, storing an area code will prevent a handset from dialling a long distance call.

- 1 Press [≡].
- 2 Press [▼] repeatedly to display "SETTING BS", then press [▶].
- 3 Press [6].
- 4 Enter "0000" (default base unit PIN).
  - If you changed PIN, enter it (page 24).
  - All the registered handset numbers will

be displayed.

- Flashing numbers indicate call restriction is turned on for the corresponding handset.
- 5 Press the desired handset numbers.
    - The selected handset numbers will flash.
    - To cancel a selected handset number, press the number again. The number will stop flashing.
  - 6 Press [▶].
  - 7 Enter the phone number to be restricted (8 digits max.).
    - If you enter a number when a previously stored number is already displayed, the new number will erase the old number.
    - To select a different memory location, press [▶] repeatedly and enter a number.
  - 8 Press [▶].
  - 9 Press [✕⓪].

### Turning on/off call restriction

- 1 Press [≡].
- 2 Press [▼] repeatedly to display "SETTING BS", then press [▶].
- 3 Press [6].
- 4 Enter "0000" (default base unit PIN).
  - If you changed PIN, enter it (page 24).
  - Handset numbers will be displayed. Flashing numbers indicate call restriction is on; non-flashing numbers indicate call restriction is off.
- 5 Press the desired handset numbers to turn on/off.
- 6 Press [▶], then press [✕⓪].

### Cancelling a restricted number

- 1 Press [≡].
- 2 Press [▼] repeatedly to display

## Useful Telephone Settings

"SETTING BS", then press [▶].

**3** Press [6].

**4** Enter "0000" (default base unit PIN).

- If you changed PIN, enter it (page 24).

**5** Press [▶] repeatedly to display the desired number.

**6** Press [C/⊗].

**7** Press [▶], then press [⌂].

### Storing emergency numbers

This feature determines which phone numbers may be dialed while the call bar feature is turned on. A total of 4 emergency numbers (memory locations 1–4) can be stored.

**1** Press [⏏].

**2** Press [▼] repeatedly to display "SETTING BS", then press [▶].

**3** Press [6].

**4** Enter "0000" (default base unit PIN).

- If you changed PIN, enter it (page 24).

**5** Press [✱].

**6** Enter the emergency number (8 digits max.).

- If you enter a number when an emergency number is already displayed, the new number will erase the old number.
- To select a different memory location, press [▶] repeatedly and enter a number.

**7** Press [▶].

**8** Press [⌂].

### Changing stored emergency numbers

**1** Press [⏏].

**2** Press [▼] repeatedly to display "SETTING BS", then press [▶].

**3** Press [6].

**4** Enter "0000" (default base unit PIN).

- If you changed PIN, enter it (page 24).

**5** Press [✱].

**6** Press [▶] repeatedly to display the desired number.

**7** Press [C/⊗] and enter the new emergency number.

**8** Press [▶].

**9** Press [⌂].

### Resetting the base unit to its default settings

**1** Press [⏏].

**2** Press [▼] repeatedly to display "SETTING BS", then press [▶].

**3** Press [0].

**4** Enter "0000" (default base unit PIN).

- If you changed PIN, enter it (page 24).

**5** Press [▶], then press [⌂].

#### Note:

- For the default settings, see page 24.
- The emergency number setting will not be reset.

## Answering System Features (KX-TCD445 only)

### Answering system

The KX-TCD445 base unit contains an answering system which can answer and record calls for you when you are unavailable to answer the phone. You can also record your own voice memos and phone conversations.

For details about memory capacity, see page 29.



#### Important:

- Only 1 handset can access the answering system (listen to messages, record a greeting message, etc.) at a time.
- When callers leave messages, the unit records the day and time of each message. Make sure the time and date have been set (page 11).

### Turning the answering system on/off

- 1 Press **[INT]**.
  - The handset number will be displayed.
- 2 Press **[⇐]**.
- 3 After the beep, press **[8]** to turn on or **[0]** to turn off.
- 4 Press **[✕⓪]**.

#### Note:

- When the answering system is turned on,  is displayed.
- When the answering system is turned off,  disappears. The unit will not answer calls.

### Greeting message

When the unit answers a call, callers are greeted by a greeting message. You can record your own greeting message or use a prerecorded greeting message.

### Recording a greeting message

You can record your own greeting message (2 minutes and 30 seconds max.).

- 1 Press **[INT]**.
  - The handset number will be displayed.
- 2 Press **[⇐]**.
- 3 After the beep, press **[7]**.
- 4 Press **[6]**.
  - Hold the handset about 20 cm away and speak clearly into the microphone.
- 5 Press **[9]** to stop recording.
  - The greeting message is played back.
- 6 Press **[✕⓪]**.

#### Note:

- To erase the greeting message, press **[✕]** during playback, then press **[6]**.
- "ERROR" is displayed if the greeting message is less than 1 second long.

### Using a prerecorded greeting message

If you erase or do not record your own greeting message, the unit can play a prerecorded greeting message for callers and ask them to leave messages. If the message recording time (page 31) is set to "GREET ONLY", caller messages will not be recorded and the unit will play a different prerecorded greeting message asking callers to call again.

### Playing back the greeting message

- 1 Press **[INT]**.
  - The handset number will be displayed.
- 2 Press **[⇐]**.
- 3 After the beep, press **[6]**.
- 4 Press **[✕⓪]**.

## Answering System Features (KX-TCD445 only)

### Erasing the greeting message

- 1 Press **[INT]**.
  - The handset number will be displayed.
- 2 Press **[⇄]**.
- 3 After the beep, press **[6]**.
- 4 Press **[✕]**.
- 5 Press **[6]**.
- 6 Press **[✕⓪]**.


#### Note:

- If you erase your own greeting message, the unit will play a prerecorded greeting message for callers.

### Listening to messages

Messages are stored and played back chronologically, from oldest message to newest.

#### Listening to new/all messages

When you have new messages,  flashes.

- 1 Press **[INT]**.
  - The handset number will be displayed.
- 2 Press **[⇄]**.
- 3 After the beep, press **[4]** to play back new messages or **[5]** to play back all messages.
- 4 Press **[✕⓪]**.

#### Note:

- To adjust the speaker volume during playback, press **[▲]** or **[▼]** repeatedly.
- While listening to messages, you can switch between the receiver and speaker by pressing **[📞]** or **[🔊]**.

#### Repeating/skipping/stopping/erasing a message during playback

- To repeat a message during playback,

press **[1]**. If pressed within the first 5 seconds of a message, the previous message will be played.

- To skip a message during playback, press **[2]**.
- To stop a message during playback, press **[9]**.
- To erase a message during playback, press **[✕]**, then press **[4]**.

#### Erasing all messages

- 1 Press **[INT]**.
  - The handset number will be displayed.
- 2 Press **[⇄]**.
- 3 After the beep, press **[✕]**.
- 4 Press **[5]**.
- 5 Press **[✕⓪]**.

#### Note:

- The greeting message is not erased.

### Recording a voice memo

To leave a private message for yourself or someone else, you can record a voice memo. This memo can be played back later, either directly or remotely.

- 1 Press **[INT]**.
  - The handset number will be displayed.
- 2 Press **[⇄]**.
- 3 After the beep, press **[7]**.
- 4 Press **[4]**.
  - Hold the handset about 20 cm away and speak clearly into the microphone.
- 5 Press **[9]** to stop recording.
- 6 Press **[✕⓪]**.


#### Note:

- Voice memos are treated as new messages.

## Answering System Features (KX-TCD445 only)

### Memory capacity

The total recording capacity (including your greeting message, caller messages, voice memos, and recorded conversations) is about 20 minutes. A maximum of 64 messages can be recorded.

- If message memory becomes full,  flashes rapidly. To record additional messages, you will need to erase unnecessary messages.
- Messages are retained even if a power failure occurs.

### Remote operation



 
 
Using a touch tone phone, you can call your phone number from outside and access the unit to listen to messages or change answering system settings. The unit's voice guidance will prompt you to press certain dial keys to perform different operations.

#### Important:

- In order to operate the answering system remotely, you must first turn on remote operation by setting a remote access code. This code must be entered each time you operate the answering system remotely.

### Turning remote operation on/off


 

A 3-digit remote access code must be entered when operating the answering system remotely. This code prevents unauthorised parties from listening to your messages remotely. After you store your remote access code, remote operation is possible.

- 1 Press .
- 2 Press  repeatedly to display "SETTING BS", then press .
- 3 Press .

- 4 Press **[1]**.

- 5 To turn on remote operation, enter a 3-digit remote access code.

- To turn off remote operation, press **[\*]**.

- 6 Press , then press  .

### Using the answering system remotely

- 1 Dial your phone number from a touch tone phone.
  - If the number of rings is set to "AUTO" (page 30), the number of rings you hear will indicate whether or not you have new messages.
- 2 After the greeting message starts, enter your remote access code.
  - The unit will announce the number of new messages.
  - After 3 seconds, voice guidance starts.

- 3 Follow the voice guidance prompts as necessary.

#### Note:

- You can hang up at any time.
- You can ignore the voice guidance and control the unit using remote commands (page 30).

### Voice guidance

During remote operation, the unit's voice guidance will prompt you to press **[1]** to perform a specific operation, or press **[2]** to listen to more available operations.

Operations are presented by voice guidance in the following order:

- Play back all messages
- Play back new messages
- Record a message
- Erase all messages
- Record your greeting message

#### Note:

- If message memory is full, erase

## Answering System Features (KX-TCD445 only)

unnecessary messages.

### Remote commands

You can press dial keys to access certain answering system functions without waiting for the voice guidance to prompt you.

Key	Remote command
[1]	Repeat message (during playback)* <sup>1</sup>
[2]	Skip message (during playback)
[4]	Play new messages
[5]	Play all messages
[6]	Play greeting message
[7]	Record greeting message
[9]	Stop (recording, playback)
[0]	Turn answering system off
[*][4]	Erase this message (during playback)
[*][5]	Erase all messages
[*][6]	Erase greeting message (during greeting message playback)
[*][#]	End remote operation (or hang up)

\*1 If pressed within the first 5 seconds of a message, the previous message will be played.

### Turning on the answering system remotely

If the answering system is off, you can turn it on remotely.

- 1 Dial your phone number from a touch tone phone.
- 2 Let the phone ring 15 times.
  - A long beep will be heard.
- 3 Enter your remote access code within 10 seconds of the long beep.
  - The greeting message is played back.

- You can hang up, or enter your remote access code again and begin remote operation.

## Guide to answering system settings

If the base unit is reset to its default settings (page 26), the following answering system-related settings will not be reset.

Feature (Default setting)	Page
Remote access code	page 29
Number of rings ("AUTO")	page 30
Caller's recording time ("UNLIMITED")	page 31
Recording quality ("OFF" (Normal))	page 31
Monitor ("ON")	page 31

### Note:

- If the base unit is reset to its default settings, answering system messages (including your greeting message) will not be erased.

## Changing the number of rings

You can change the number of times the phone rings before the unit answers calls. "AUTO": The unit answers after 2 rings when new messages have been recorded, and after 5 rings when there are no new messages. If you call your phone from outside to listen to new messages (page 29), you will know that there are no messages when the phone rings for the 3rd time. You can then hang up without being charged for the call.

- 1 Press [RECORD].
- 2 Press [▼] repeatedly to display "SETTING BS", then press [▶].

## Answering System Features (KX-TCD445 only)

- 3 Press **[⇐]**.
- 4 Press **[2]**.
- 5 Select the desired setting by pressing **[2]** to **[7]** for 2 to 7 rings or **[0]** for "AUTO".
- 6 Press **[▶]**, then press **[✕⊙]**.

### Selecting the caller's recording time

You can change the maximum message recording time allotted to each caller, or set the unit to greet callers but not record messages.

"1 MINUTE": Caller messages are limited to 1 minute.

"UNLIMITED": Caller messages are limited only by the amount of total recording time available in the answering system.

"GREET ONLY": The unit plays the greeting message but does not record caller messages.

- 1 Press **[≡]**.
- 2 Press **[▼]** repeatedly to display "SETTING BS", then press **[▶]**.
- 3 Press **[⇐]**.
- 4 Press **[3]**.
- 5 Select the desired setting by pressing **[1]** for "1 MINUTE", **[2]** for "UNLIMITED" or **[3]** for "GREET ONLY".
- 6 Press **[▶]**, then press **[✕⊙]**.

#### Note:

- When the recording time is set to "GREET ONLY", the following will be displayed.



### Turning the recording quality on/off

The unit can record messages in either high or normal quality mode. In normal quality mode, the total recording time is approximately 20 minutes.

In high quality mode, recording quality is improved, but the total recording time is reduced to approximately 10 minutes.

- 1 Press **[≡]**.
- 2 Press **[▼]** repeatedly to display "SETTING BS", then press **[▶]**.
- 3 Press **[⇐]**.
- 4 Press **[8]**.
- 5 Select the desired setting by pressing **[1]** for "ON" (high) or **[2]** for "OFF" (normal).
- 6 Press **[▶]**, then press **[✕⊙]**.

### Turning the monitor on/off

You can select whether the greeting message and the caller message are heard through the unit's receiver and speaker when the unit answers a call.

- 1 Press **[≡]**.
- 2 Press **[▼]** repeatedly to display "SETTING BS", then press **[▶]**.
- 3 Press **[⇐]**.
- 4 Press **[4]**.
- 5 Press **[1]** to turn off or **[2]** to turn on.
- 6 Press **[▶]**, then press **[✕⊙]**.

#### Note:

- When the monitor is turned on, you can turn off only the speaker volume by pressing **[▼]** for 1 second.

## Multi-unit Operation

### Operating additional units

#### Additional handsets

Up to 6 handsets can be registered to a single base unit. Additional handsets will give you the freedom to, for example, have an intercom call with another handset while a third handset is on an outside call. See page 3 for information on ordering additional handsets.

#### Additional base units

Handsets can be registered to up to 4 base units, allowing you to add additional base units and extend the area in which your handset(s) can be used. If a handset moves out of range of its base unit when "AUTO" is selected on base unit selection (page 33), it will look for another base unit to make or receive calls. A base unit and the handsets it communicates with is called a "radio cell".

##### Note:

- Calls will be disconnected when the handset moves from one radio cell to another.
- Intercom calls and call transfers are only possible between handsets in the same radio cell.

### Registering a handset to a base unit

#### To register an additional handset to a base unit (easy registration)

The included handset and base unit are preregistered. After purchasing an additional handset, register it to the base unit using the following method.

- 1 Lift the additional handset and press **[\*0]**.

- 2 Press and hold **[M]** on the left side of the base unit for about 5 seconds, until the registration tone sounds.

- 3 Place the additional handset on the base unit. The registration tone continues to sound. With the handset still on the base unit, wait until a confirmation tone sounds and **[M]** stops flashing.

##### Note:

- If an error tone sounds, or if **[M]** is still flashing, register the handset manually (manual registration).
- If all registered handsets start ringing in step 2, press **[M]** to stop, then start again.
- Charge the batteries of your additional handset for about 7 hours before initial use.
- This registration method cannot be used for handsets that have already been registered to a base unit. Register the handset manually (page 32).

#### To register a handset to an additional base unit (manual registration)

You can register a handset to a base unit manually using the following method.

 
- 1 Press **[M]**.
- 2 Press **[▼]** repeatedly to display "SETTING HS", then press **[▶]**.
- 3 Press **[▼]** repeatedly to display "REGISTRATION", then press **[▶]**.
- 4 Press **[▼]** repeatedly to display "REGISTER HS", then press **[▶]**.
- 5 Press and hold **[M]** on the left side of the base unit for about 5 seconds, until the registration tone sounds.
  - After pressing **[M]**, the rest of the procedure must be completed within 1 minute.
- 6 Press **[▼]** repeatedly to select a base unit number, then press **[▶]**.
- 7 Wait until "BS PIN" is displayed, then enter "0000" (default base unit PIN).




## Multi-unit Operation

- If you changed PIN, enter it (page 24).

### 8 Press [▶].

- When the handset has been registered successfully, a confirmation tone will sound, and  will stop flashing.

#### Note:

 - If all registered handsets start ringing in step 5, press [>] to stop, then start again from step 1.

## Selecting a base unit

When "AUTO" is selected, the handset will automatically use any available base unit it is registered to. When a specific base unit is selected, the handset will make and receive calls using that base unit only. If the handset is out of range of that base unit, no calls can be made.

### 1 Press [].

### 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].

### 3 Press [▼] repeatedly to display "SELECT BS", then press [▶].

### 4 Press [▼] repeatedly to display "AUTO" or a specific base unit number, then press [▶].

- The handset starts searching for the base unit.

#### Note:

- When a handset is registered to another base unit, this setting will automatically change to that base unit's number even if "AUTO" was selected.

## Cancelling a handset

A maximum of 6 handsets can be registered to a base unit. A handset can cancel its own registration (or the registration of another handset) that is stored in the base unit. This will allow the base unit to "forget" the handset.

### 1 Press [].

### 2 Press [▼] repeatedly to display "SETTING BS", then press [▶].

### 3 Press [7].

### 4 Enter "0000" (default base unit PIN).

- If you changed PIN, enter it (page 24).

### 5 Press the desired handset number.

- The selected handset number will flash.

### 6 Press [▶].

### 7 Wait until "SETTING BS" is displayed, then press [].

## Cancelling a base unit

A handset can be registered to a maximum of 4 base units. A handset can cancel a base unit that it is registered to. This will allow the handset to "forget" that base unit.

### 1 Press [].

### 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].

### 3 Press [▼] repeatedly to display "REGISTRATION", then press [▶].

### 4 Press [▼] repeatedly to display "CANCEL BS", then press [▶].

### 5 Enter "0000" (default handset PIN).

- If you changed PIN, enter it (page 23).

### 6 Press [▼] repeatedly to select the desired base unit number, then press [▶].

- The selected base unit number will flash.

### 7 Press [▶].

### 8 Press [▼] repeatedly to select "YES", then press [▶].

- To stop cancelling, select "NO".

### 9 Press [].

#### Note:

- To register the handset to another base unit or to the same base unit again, see manual registration (page 32).






## Multi-unit Operation

### Setting all or selected handsets to ring






You can select one of 3 methods to determine how the handsets ring for incoming calls.

- “1”: All handsets will ring.
- “2”: Selected handset(s) will ring.
- “3”: Selected handset(s) will ring, then all handsets will ring.







#### Setting all handsets to ring

- 1 Press [  ].
- 2 Press [  ] repeatedly to display “SETTING BS”, then press [  ].
- 3 Press [ **1** ].
- 4 Enter “0000” (default base unit PIN).
  - If you changed PIN, enter it (page 24).
- 5 Press [ **1** ] to select “1”.
- 6 Press [  ], then press [  ].

#### Setting the selected handset(s) to ring

- 1 Press [  ].
- 2 Press [  ] repeatedly to display “SETTING BS”, then press [  ].
- 3 Press [ **1** ].
- 4 Enter “0000” (default base unit PIN).
  - If you changed PIN, enter it (page 24).
- 5 Press [ **2** ] to select “2”.
  - All registered handset numbers will be displayed and the pre-selected handset number will flash.
- 6 Press the desired handset number(s).
  - The selected handset number(s) will flash.
  - To cancel a selected handset number, press the number again. The number will stop flashing.
- 7 Press [  ], then press [  ].

#### Setting the selected handset(s) to ring before all handsets ring

- 1 Press [  ].
- 2 Press [  ] repeatedly to display “SETTING BS”, then press [  ].
- 3 Press [ **1** ].
- 4 Enter “0000” (default base unit PIN).
  - If you changed PIN, enter it (page 24).
- 5 Press [ **3** ] to select “3”.
  - All registered handset numbers will be displayed and the pre-selected handset number will flash.
- 6 Press the desired handset number(s).
  - The selected handset number(s) will flash.
  - To cancel a selected handset number, press the number again. The number will stop flashing.
- 7 Press [  ].
- 8 Press a dial key from [ **1** ] to [ **6** ] to select the number of rings before all handsets ring.
  - The selected number of rings will be shown on the right edge of the display.
- 9 Press [  ], then press [  ].

## Multi-unit Operation

### Intercom between handsets

You can make intercom calls between 2 handsets in the same radio cell.

**Example:** When handset 1 calls handset 2

**1 Handset 1:**

Press **[INT]** and **[2]** (desired handset number).

**2 Handset 2:**

Press **[↶]** or **[↷]** to answer.

**3** When finished talking, press **[⏏]**.

**Note:**

- Intercom calls can be made between handsets in the same radio cell, but not between handsets in different radio cells.

### Transferring calls between handsets/ Conference call

Outside calls can be transferred between 2 handsets in the same radio cell. 2 handsets in the same radio cell can have a conference call with an outside party.

**Example:** When handset 1 transfers a call to handset 2

**1 Handset 1:**

During an outside call, press **[INT]** and **[2]** (desired handset number).

- If there is no answer, press **[INT]** to return to the outside call.

**2 Handset 2:**

Press **[↶]** or **[↷]** to answer the page.

- Handset 2 can talk with handset 1.
- The outside call will be put on hold.

**3 Handset 1:**

To complete the call transfer, press **[⏏]**.

To establish a conference call, press **[3]**.

#### To transfer a call directly without speaking to handset 2

After step 1, press **[⏏]** on handset 1.

If the transferred call is not answered within 30 seconds, handset 1 will ring again.

## Useful Information

### Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the AC adaptor and turn off the handset, then reconnect the AC adaptor and turn on the handset.

#### is flashing.

- The handset is not registered to the base unit. Register it (page 32).
- The handset is too far from the base unit. Move closer.
- The AC adaptor is not connected. Check the connections.

#### I cannot make or receive calls.

- The AC adaptor or telephone line cord is not connected. Check the connections.
- If you are using a splitter to connect the unit, remove the splitter and connect the unit to the wall socket directly. If the unit operates properly, check the splitter.
- Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider.
- The call bar feature is turned on. Turn it off (page 22).
- You dialled a call restricted number (page 25).
- The key lock feature is on. Turn it off (page 13).

#### The unit does not ring.

- The ringer volume is turned off. Adjust the handset ringer volume (page 20) and the base unit ringer volume (page 24).

#### The handset display is blank.

- The handset is not turned on. Turn the

power on (page 10).

#### The handset will not turn on.

- Make sure that the batteries are installed correctly (page 8).
- Fully charge the batteries (page 9).
- Clean the charge contacts and charge again (page 9).

#### The battery should be charging but the battery icon does not change.

- Clean the charge contacts and charge again (page 9).
- The AC adaptor is disconnected. Plug in the AC adaptor.

#### A busy tone is heard when or is pressed.

- The handset is too far from the base unit. Move closer and try again.
- Another handset is on an outside call. Wait for the other user to complete the call.

#### Static, sound cuts in/out, fades.

 
 
##### Interference from other electrical units.

- Locate the handset and the base unit away from other electrical appliances.
- Move closer to the base unit.

#### The handset stops working while being used.

- Disconnect the AC adaptor and turn off the handset. Connect the AC adaptor, turn on the handset and try again.

#### While storing an entry in the phonebook or assigning a hot key, the handset starts to ring.


- A call is being received. To answer the call, press  or . Programming will be cancelled. Start again.

#### Pressing does not display/dial the last number dialled.


- If the redialled number was more than 24 digits long, the number will not be

## Useful Information


redialled. Redial the number manually.

**The handset beeps intermittently and/or  flashes.**

- Fully charge the batteries (page 9).

**I fully charged the batteries, but  still flashes.**

- Clean the charge contacts and charge again (page 9).
- It is time to replace the batteries (page 10).

** disappears and the unit stops charging when the handset is on the base unit.**

- Nickel cadmium batteries are inserted when the battery type is set to "NI-MH". Change the battery type setting to "NI-CD" (page 23).

**Caller information is not displayed.**

- You must subscribe to Caller ID service.

**While viewing caller information, the display returns to standby mode.**

- Do not pause for over 60 seconds while searching.

**I cannot register a handset to a base unit.**

- The maximum number of base units (4) are already registered to the handset. Cancel unused base unit registrations from the handset (page 33).
- The maximum number of handsets (6) are already registered to the base unit. Cancel unused handset registrations from the base unit (page 33).
- You entered the wrong PIN number. If you forget your PIN, consult your nearest Panasonic service centre.
- Locate the handset and the base unit away from other electrical appliances.

## Answering system (KX-TCD445 only)

**The answering system is turned on, but caller messages are not recorded.**

- The recording time is set to "GREET ONLY". Select "1 MINUTE" or "UNLIMITED" (page 31).
- Message memory is full. Erase unnecessary messages (page 28).

**I cannot operate the answering system with the handset.**

- Another handset user is using the answering system or changing base unit settings. Wait for the other user to finish.
- A caller is leaving a message. Wait for the caller to finish.
- The handset is too far from the base unit. Move closer.

**I cannot operate the answering system remotely.**

- You are entering the wrong remote access code. Turn remote operation on using the handset and select a new code (page 29).
- You are pressing the dial keys too quickly. Press each key firmly.
- The answering system is turned off. Turn it on (page 27, 30).
- You are using a pulse telephone. Try again using a touch tone phone.

**While recording a greeting message or listening to messages, the unit rings and recording stops.**

- A call is being received. Answer the call and try again later.

## Useful Information

### Technical information

**Standard:** DECT (Digital Enhanced Cordless Telecommunications), GAP (Generic Access Profile)

**Number of channels:** 120 Duplex Channels

**Frequency range:** 1.88 GHz to 1.9 GHz

**Duplex procedure:** TDMA (Time Division Multiple Access)

**Channel spacing:** 1728 kHz

**Bit rate:** 1152 kbit/s

**Modulation:** GFSK (Gaussian Frequency Shift Keying)

**RF Transmission Power:** Approx. 250 mW

**Voice coding:** ADPCM 32 kbit/s

**Power source:** AC adaptor 220–240 V, 50 Hz

**Power consumption, Base unit:** Standby: Approx. 3.5 W, Maximum: Approx. 9.2 W

**Operating conditions:** 5 °C–40 °C, 20 %–80 % relative air humidity (dry)

**Dimensions, Base unit:** Approx. 58 mm x 128 mm x 105 mm

**Dimensions, Handset:** Approx. 143 mm x 48 mm x 32 mm

**Mass (weight), Base unit:** Approx. 170 g

**Mass (weight), Handset:** Approx. 120 g

**Note:**

- Specifications are subject to change.
- The illustrations used in these operating instructions may differ slightly from the actual product.

**Index**

- A** Additional base units: 32
  - Additional handsets: 32
  - All handsets to ring: 34
  - Selected handsets to ring: 34
- Answering calls: 14
- Answering system
  - Remote operation: 29
  - Turning on/off: 27
- Auto talk: 14
- Automatic redial: 12
- B** Base unit
  - Cancelling: 33
  - Guide to settings: 24
  - PIN: 24
  - Resetting: 26
  - Selecting: 33
- Battery
  - Charge: 9
  - Installation: 8
  - Life: 9
  - Replacement: 10
  - Strength: 9
  - Type: 23
- Battery low alarm: 21
- C** Call bar: 22
- Call restriction: 25
- Call transfer: 35
- Call waiting tone: 21
- Caller ID: 17
  - Call waiting and Caller ID compatible: 17
  - Calling back: 17
  - Editing: 18
  - Erasing: 18
  - Storing into phonebook: 18
  - Viewing: 17
- Character table: 15
- Conference call: 35
- Connections: 8
- D** Direct call: 22
- Display
  - Icons: 7
  - Language: 22
  - Standby mode: 21
  - Talk mode: 21
- E** Emergency call: 26
- H** Handset
  - Cancelling: 33
  - Guide to settings: 19
  - Locator: 14
  - PIN: 23
  - Power on/off: 10
  - Resetting: 23
  - Hot key (quick dial): 16
- I** Intercom: 35
- K** Key lock: 13
- Key tone: 21
- L** Listening to messages: 28
- M** Making calls: 12
- Mute: 13
- P** Pause: 13
- Pause length: 25
- Phonebook: 15
  - Editing: 15
  - Erasing: 15
  - Making calls: 16
  - Storing: 15
- PIN
  - Base unit: 24
  - Handset: 23
- Power on/off (Handset): 10
- R** Range alarm: 21
- Recall: 13
- Recall time: 24
- Recording
  - Greeting message: 27
  - Telephone conversation: 13
  - Voice memo: 28
- Redial list: 12
- Redialling: 12
- Registration: 32
- Ringer type: 20
- S** Speakerphone: 12
- T** Temporary ringer off: 14
- Time alarm: 20
- Time and date: 11
- V** Volume
  - Receiver: 12
  - Ringer (Base unit): 24
  - Ringer (Handset): 20
  - Speaker: 12
- W** Wall mounting: 11

**For your future reference**

Attach or keep original receipt to assist with any repair under warranty.

Serial No. (found on the bottom of the unit)

Date of purchase

Name and address of dealer

**Note:**

- In the event of problems, you should contact your equipment supplier in the first instance.

**Customer Support Centre Tel. No.: 132600**

 **N52**

**Sales Department:**

**Panasonic Australia Pty. Limited**

Austlink Corporate Park  
1 Garigal Road  
Belrose  
NSW 2085  
AUSTRALIA

**Manufacturer:**

**Panasonic Communications Co., Ltd.**

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

© 2004 Panasonic Communications Co., Ltd. All Rights Reserved.

**PQQX14170ZA** FT0504FD0